
000WQ

VIVRE

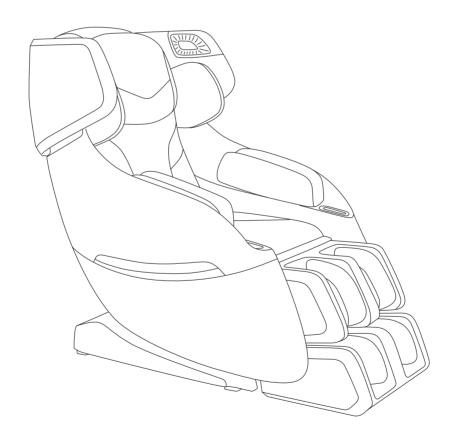

User Manual OG 5208 使用手册



OQQWQ

VIVRE

User Manual
All information is correct at the time of print



Before Use

Deloie	030
	● Important safety instructions EN1 ● Grounding instructions EN5 ● Product parts EN6 ● Setup of the massage lounger EN7 ● Before use EN8
How to	Use
	Operation Instruction
Mainte	nance
	Cleaning and maintenance
Q&A/In	nportant notes
	■Q&A

Important safety instructions Must be followed

These safety instructions must be strictly followed in use to avoid personal injuries and property damage are as follows:

All the safety instructions are described in compliance with degrees of the injuries or damage as a result of wrong use.

Warning

Actions tending to cause serious injuries or death

Caution

Actions tending to cause minor injuries or property damage

Pay attention to the symbols before safety instructions (an example is given below).



Actions that must be absolutely forbidden



Actions that must be done

∕!\ Warning

 
- Before using the product, persons who are being treated or have any of the following symptoms should consult a physician.
 - (1) Persons with a pacemaker or another in-vivo electronic medical device tending to suffer electronic jamming;
 - (2) Patients with malignant tumors;
 - (3) Patients with heart disease;
 - (4) Persons proved to be unable to identify temperatures:
 - (5) Pregnant persons or women who have just had childbirth;
 - (6) Persons with perceptual disturbance because of diabetes or another serious peripheral circulation (12) Persons with protrusion of intervertebral disturbance:
 - (7) Osteoporosis patients, spinal fracture patients, or persons with acute painful diseases such as sprains or muscle strains;

- (8) Persons with injuries in the massaged
- Persons with a body temperature above 38 °C (with a fever) (For example, persons with intense acute inflammation symptoms such as listlessness, cold shivers and blood pressure change or persons in poor health);
- (10) Persons who are unwell or must have a rest;
- (11) Persons with an abnormal or bent vertebra;
- disc:
- (13) Persons who feel very uncomfortable (except for the circumstances above)

Otherwise accidents or physical discomfort may happen.

 If you feel physically abnormal while using or no effect after use, stop the product immediately and consult a physician about it.

Otherwise accidents or physical discomfort may happen.



Before use, make sure there is no foreign matter between the backrest and the back cover. Otherwise accidents or physical discomfort may happen.

 Before use, lift the back cushion and check whether fabric of traveling sections of the massage wheels or of other positions are damaged. (Even if the fabric is slightly damaged, stop the product immediately, pull out the power

plug and send the product to repair.) '
If the product is used when the fabric is damaged, you may get injured or get an electric shock.

- Do not massage for more than 30 minutes each time.
- Do not massage a single part for more than 5 minutes. If any of these safety instructions is not followed, you may suffer an adverse effect and be injured.
- After use each time, turn the power switch to the "O" position, and then pull out the

Otherwise accidents or injuries may happen due to naughty behaviors of children.

- Follow the regulations about use of the socket and the wiring devices.
- Use a 220-240V~,50/60Hz power supply.
 (Do not use the product in a foreign country or connect it with a transformer without permission.) Otherwise electric shocks, product faults or fires because of overheat may happen.
- Insert the power plug thoroughly into the socket. Otherwise electric shocks or fires caused by overheat may happen.
- Remove such dirt as dust on the power plug at regular intervals. Otherwise fires caused by poor insulation due to factors such as moisture may happen. (Wipe the power plug with dry cloth.)

∕!\ Warning



 In the case of any abnormality or fault, stop the product immediately and pull out the power plug to avoid smoke, fires and electric shocks.

Abnormality and fault examples

- The product fails to work after the power switch is turned to the ON position;
- After the power line is moved, the product is discontinuously powered on;
 In use, the product gives off a burning smell or an abnormal sound;
- The product is deformed or abnormally heating;
- Do not put the back cushion between the backrest and the back cover. Otherwise product faults may happen.
- When handling the product, hold its frame. Otherwise product faults or personal injuries may happen.
- The following persons should not use the product. Persons for whom massage is forbidden by doctors, such as persons with thrombosis, serious aneurysm, acute venous aneurysm, various skin inflammations (such as subcutaneous tissue inflammation) or various skin infections.

Otherwise diséases may get worse.

- The following persons should not massage their waists.
 - Persons with acute lumbago, protrusion of intervertebral disc, or displacement of a lumbar vertebra;
 - Persons with deformation or other discomfort of the hip joint Otherwise diseases may get worse.
- Do not put hands, arms or feet into the backrest's fabrics of traveling sections of the massage wheels.
- Children should not use the product. Keep them from playing on the product or climbing onto the Lower Leg/Foot massage section, the seat, the backrest or the armrests.
- Do not climb onto the backrest or the armrests.

Do not lean or sit on the backrest.

- Keep your head from reachable areas of the backrest and the back cover.
- Persons unable to express themselves clearly or unable to operate the product should not use the product.
- When massing the neck, pay attention to moving directions of the massage wheels and do not massage with a too large force or massage front part of the neck. Otherwise accidents or personal injuries may happen.
- Do not damage the power line or the power plug.

(Do not damage, machine, forcedly bend, twist or prolong the power line or the power plug, or place the power line or the power plug close to a heater, or tie or bind any heavy objects on the power line or the power plug.)

A damaged power line or power plug may result in electric shocks, short circuit faults or fires.



Forbidden

Wet-hand operation forbidden

 Do not insert or pull out the power plug with wet hands. Otherwise electric shocks may happen.



• Do not refit, disassemble or repair the product without permission. Otherwise fires, abnormal movements or personal injuries may happen.

Disassembly forbidden

the appliance is to be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30 mA.



This appliance is considered to be suitable for use in countries having a tropical climate. It may also be used in other countries.

This product can be used in tropical climates



- The following persons (even if they are physically healthy at present) should consult a physician before using the product.
 - (1) Persons with muscular atrophy due to aging or thin persons;
 - Persons feeling lumbago because of bone or viscus problems;
 - (3) Persons tending to suffer sprains or bruising;
 - (4) Persons with carsickness or seasickness or strong response when taking other transport means:
 - (5) Persons who once received a heart operation or another visceral operation; Otherwise health may get worse.
- Before sitting on the product, make sure there is no foreign matter between any two parts
 - (Make sure there is no foreign matter on the back cover, the backrest, the seat surface, the Lower Leg/Foot massage section or inside surface of the back cushion.) Otherwise accidents, injuries, or product faults caused by clamping of hands, feet, or other articles by the product may happen.
- Do not use the product when wearing any hard decorative article on head (such as hair
- İf there is any hard article (such as mobile phone or key) in a pocket of the trousers, take it out before massage.



- Before sitting on the seat, make sure the massage wheels are in the retracting positions.
- If you want to leave the seat during the massage, stop the product first. Otherwise accidents or injuries may happen.
- When pulling out the power plug, do not pull the power line but hold the power plug. Otherwise an electric shock or a short circuit fault may happen.
- Before moving the product, make the Lower Leg/Foot massage section back to the original position by adjusting its angle. Otherwise injuries may happen.
- When moving the product by pulleys, put articles such as mats on the floor. Otherwise marks may be left on the floor.
- Before moving the product by pulleys, remove the obstructions close to it. Lift the seat surface of the Lower Leg/Foot massage section to a position a little lower than the waist and move the product slowly.

 Otherwise accidents or injuries may happen because of turnover of the product.

- In use, place the product horizontally.
 Otherwise accidents due to turnover of the product may happen.
- If any symptom such as skin inflammation, itching or swelling in use, stop the product immédiately and consult a physician. Otherwise accidents or physical discomfort may happen.
- If the product is used again for massage after a period of out-of-service, read the Operating Instructions again and make sure the product can run normally first. Otherwise accidents or injuries may happen.
- Do not use the product and other devices at the same time. Otherwise accidents or physical discomfort may happen.



- Keep head, abdomen or skin from the massage wheels and do not put hands or feet between the massage wheels.
- Do not put the knees between the Lower Leg/Foot massage section.
- Do not fall asleep while using the product. Do not use the product after drinking.
 If air in the filling the air bag on the seat is not completely discharged, do not stand or jump on the seat or put things on it.

Otherwise accidents or injuries may happen.

∕!\ Caution • Do not put hands or feet between the product and the Lower Leg/Foot massage section. Do not put hands, arms, or head into the seam of the Lower Leg/Foot massage section (footrest). For safety, admit the Lower Leg/Foot massage section after massage. • Do not put hands, feet or head between the backrest and the back cover. Do not put pets on the product (such as its back cover, backrest and armrest). Do not pull out the power plug or turn OFF the power switch suddenly during massage. Otherwise injuries may happen. • Do not stand or sit on the back cover. Otherwise personal injuries due to the product toppling may occur. Do not stand or sit on the armrests. Otherwise personal injuries may happen. Do not stand or sit on the Lower Leg/Foot massage section or the footrest. Forbidden Otherwise accidents or injuries due to rotation of front of the footrest or turnover of the product may happen. If bottom of the Lower Leg/Foot massage section runs into the floor, the floor may be damaged. • Do not drag or push the product after it is installed. Otherwise the floor may be damaged. • Do not move the product while there is a person on it. Otherwise, accidents, or injuries may happen due to a toppling of the product. • Do not use the product on heating devices such as electric blankets. Otherwise fires may happen. • Do not use the product in a bathroom or another wet place. Wet-hand Otherwise electric shocks or product faults may happen. contact forbidden Do not sprinkle substances such as water on the product or its remote controller. **Product** Otherwise electric shocks, short circuit, or product faults may happen. wetting forbidden • Before cleaning or maintaining the product, pull out the power plug first. Otherwise electric shocks or injuries may happen. • In the case of a power failure, pull out the power plug at once. Otherwise accidents or injuries may happen when power is restored. **Pull out**

Warning:

the power

plug

moisture.

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Otherwise electric leakage fires may happen because of insulation aging caused by dust and

2. The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.

When the product is not used, pull out the power plug.

Grounding instructions

The product must be grounded to reduce the electric shock hazard because of functional faults of the product.

The product has a power line with a grounding conductor and a grounding plug. The grounding plug must be inserted into an appropriate socket that has been correctly installed and grounded in full compliance with the local code and decree.

∕!∖ Caution

• If the grounding conductor is not correctly connected, electric shocks may happen. If you are not sure about correctness of the grounding, have it inspected by a professional electrician. Even if the grounding plug provided with the product does not match with the socket you have, do not refit it by yourself but ask a professional electrician to install an appropriate socket.

The product has a grounding plug. Make sure the product is connected with a socket matching with

shape of the grounding plug.

• Do not connect the product to a multi-plug.


• If the power plug is damage, stop using it and contact our customer service hotline.

• This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

• Children should be supervised to ensure that they do not play with the appliance.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.


Product Parts

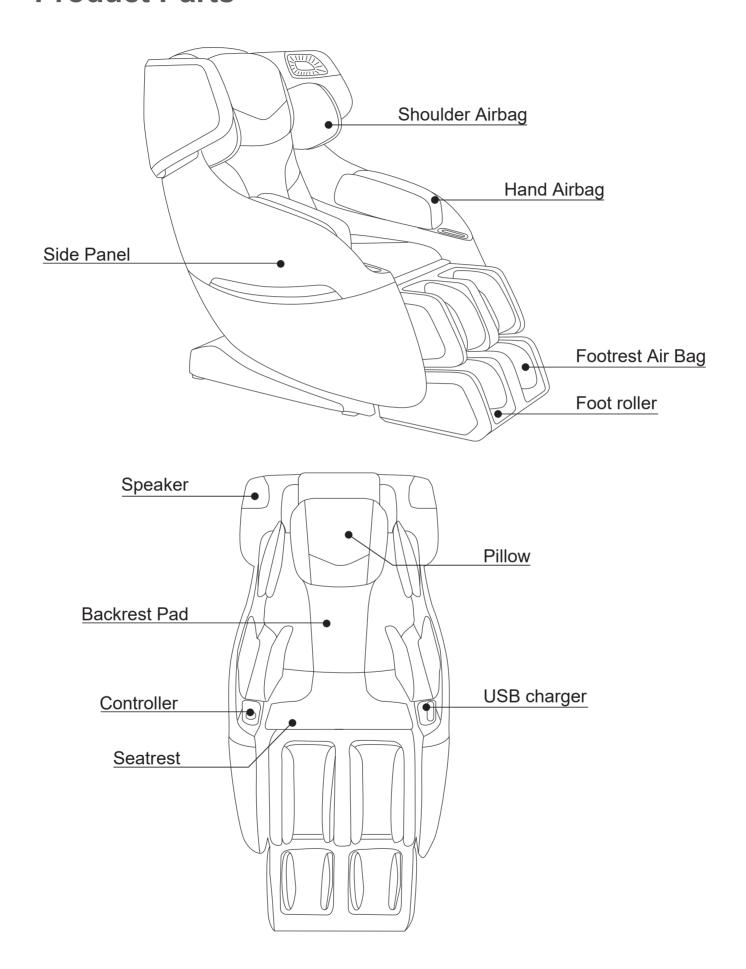

Setup of the massage lounger

Before use (installation position)

Make sure there is enough space for the tilting of the product.

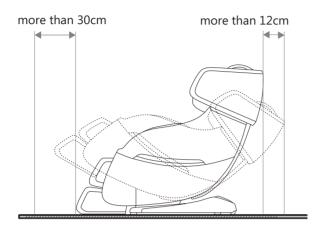


- Do not expose the product to direct sunlight or a high-temperature place (e.g., in front of heating equipment); otherwise its synthetic leather may fade or harden.
- Place a mat below the product to avoid floor damage. The mat should cover the product's area in contact with the floor and the footrest's area in contact with the floor (minimum dimensions: 150X80cm). See the figure.
- Install the product close to a power socket.

2

Chair Moving Instruction

Recline the chair to easily move the chiar around the house.

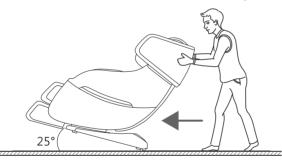

- **Caution**
- Before moving the chair, please put the footrest back into the original positon. Otherwise, injuries might occur in the process of moving.
- Avoid moving the massage chair when there is someone seated on it.
- Placing a mat underneath the massage chair is advisable, as the moving process might lave scratches on the floor surface.

The product is heavy and be careful when moving.

Product weight

Approx. 66kg

Put the product on the floor.

- Put down the product slowly and carefully to avoid foot injury.
- Do not release the footrest until the product is placed horizontally. Otherwise the footrest will rebound to its original position.
- It is suggested to pave an article such as a mat on the floor to keep it from damage.


⚠ Caution

- Do not drag or pull the product after it is installed.
- When handling the product, do not hold its frame
 - Otherwise product faults or personal injuries may happen.
- Do not move the product by pulleys directly on a floor.
 - Otherwise marks may be left on the floor.
- Do not move the product while there is a person on it.
 - Otherwise, accidents or injuries may happen due to falling down.
- Do not hold the foot massage section when moving the product.
- Otherwise injuries may happen due to sliding.

Before use


Check the space around the product.

Make sure there is no person, pet or other object close to the product.

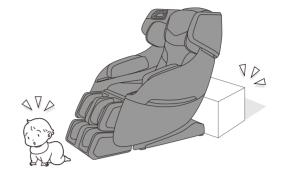

Roll up the back cushion and fix it by the zipper.

Roll up the back cushion and fix it on the main body by the zipper.

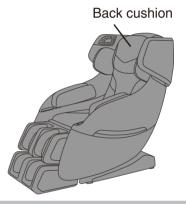


Make sure there is no foreign matter in the seams of the product.

When checking the Lower Leg/Foot massage section, press the footrest forward by your hands and make sure there is no foreign matter in the seam.

⚠ Caution

- Do not put hands, fingers, feet or head into the seam(s) between the footrest and the seat surface or the armrests.
- Before sitting on the product, make sure there is no foreign matter between any two parts of it.
- Do not put pets on the product (such as its back cover, backrest).

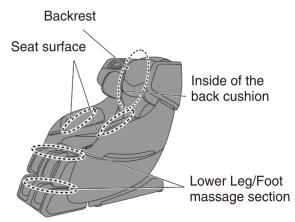



Inspect the power line and power plug


Marning

 Remove such dirt as dust on the power plug at regular intervals.

Otherwise fires caused by poor insulation due to factors such as moisture may happen. (Wipe the power plug with dry cloth.)


• Do not damage the power line or the power plug. Do not damage, machine, forcedly bend, twist or lengthen the power line or the power plug, or place the power line or the power plug close to a heater, or tie or bind any heavy objects on the power line or the power plug.

A damaged power line or power plug may result in electric shocks, short circuits, or fires.

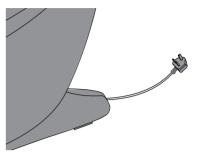

Do not be entangled by the power line.

Push the interface into the power input jack till the end.

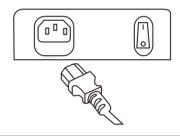



Power on the product

- Insert the power plug into the power socket.
- Pull the power switch to the "|" position.



Marning

 Insert the power plug into the power socket till the end.


Otherwise electric shocks or fires because of overheat may happen.

- Abide by the regulations on use of the socket and the wiring devices strictly.
- Use a 220-240V~,50/60Hz power supply.
 (Do not use the product in a foreign country or connect it with a transformer without permission.)

Otherwise electric shocks, product faults or fires because of overeat may happen.

 Do not insert or pull out the power plug with wet hands.


Otherwise an electric shock may happen.

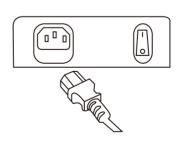

Before use (Continued)



Make sure the massage wheels are retracted

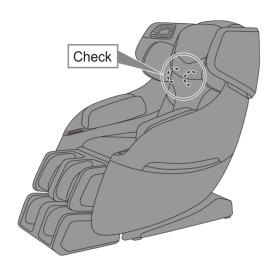


If they are not,

press ON return them to the retracting position.

7

Make sure the fabric is not damaged nor cracked

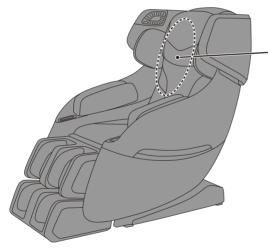

- Inspected area:


The fabric of traveling sections of the massage wheels on the backrest

Warning

 Before use, check whether fabrics of the area pointed out in the figure are damaged.
 (Even if the fabric is slightly damaged, stop the product immediately, pull out the power plug and send the product to repair.)

If the product is used when there is fabric damage, you may get injured or get an electric shock.

Operation Instruction

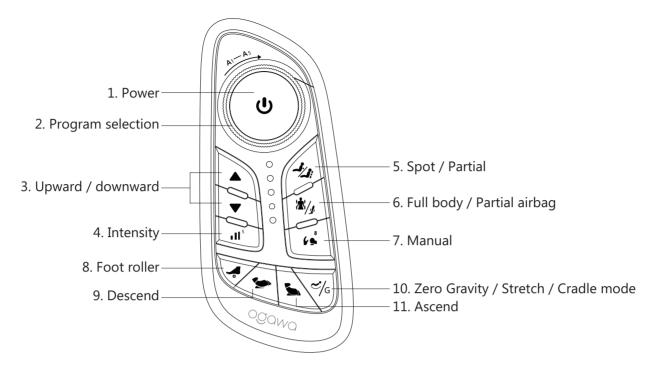

Note: The default time for all massage functions is 15 minutes. The chair will be off after 15 min's use.

1. Power

Press the Power button to switch on the massage chair. Press this button again to switch off the massage chair. The massage chair will then return to the origin position.

2. Program selection

Rotary switch can rotate to select different massage program. A1 Relaxation > A2 Waist relief > A3 Neck & shoulder > A4 Sweet dream > A5 Vitality

3. Upward / downward

In the spot / partial massage, the user may press and hold this button to move massage roller up / down. Once the massage rollervreach the desired location, simply release the button and the massage roller will fixed at the preferred place.

4. Intensity

Use to control air bag pressure.

5. Spot / Partial

In manual massage, press this button to control massage position at back from Spot > Partial > OFF.

6. Full body / Partial airbag

Press this button to activate airbag masage. The massage sequence will be (hand shoulder and leg), (hand and shoulder), (leg and foot).

7. Manual

Press this button the apply manual massage, the function will change in sequence of kneading > knocking > clapping > Shiatsu > kneading & clapping > swedish > tapping > rolling.

8. Foot roller

Press this button to activate foot roller, press again to turn off.

9. Descend

Press this button to descend massage chair. press again to stop when it reach desired angle.

10. Zero Gravity / Stretch / Cradle mode

Zero G 1 > zero G 2 > back to origin.

Press and hold the button for 3 second to activate swing mode. To turn off, repeat the similar step.

11. Ascend

Press this button to ascend massage chair. press again to stop when it reach desired angle.


Bluetooth connection

Turn on mobile phone bluettoth function


bluetooth version 2.1 and above, bluetooth name: OGAWAOG5208+xxxxx, the pin number: 9999

After massage

Power off the product.

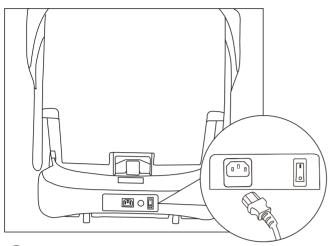

- 1 Turn off the power switch.
- (2) Pull out the power plug.

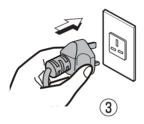

Warning

• After use each time, pull the power switch to the O position and pull out the power plug; otherwise accidents and injuries by playing with them by children may happen.

Timer function

Massage will end automatically when time is up.

- ■The Lower Leg/Foot massage section will remain at the final position.
- The massage wheels will move to the retracting positions.
- The backrest will not raise automatically. If controller was shut off, press ON/OFF button, the backrest and footrest will back to origin.

Cleaning and maintenance

Cleaning of the synthetic leather

Wipe the synthetic leather with a soft dry cloth.

- Do not clean the product with chemicals such as thinners, gasoline and alcohol.
- When using a leather maintenance product (cleaning cloth) sold on the market, follow its directions for use
- If the synthetic leather is very dirty, wipe it with the method below.
 - ①Put a piece of soft cloth into water or 3% to 5% neutral detergent contained hot water and wring it out.
 - ②Wipe surface of the synthetic leather with the soft cloth.
 - Wipe the detergent with a piece of cloth once soaked in clean water and wrung out.
 - 4) Wipe with a piece of wrung soft cloth.
 - 5 Have the synthetic leather take natural air drying.
- If it is difficult to remove the stains on the synthetic leather, soak a piece of melamine foam bought from the market into a neutral detergent and use it wipe the product.
- Do not dry the surface by a hair drier.
- Surface of the synthetic leather may be dyed by fabric colors; therefore, be careful when wiping the product with denim or colored cloth.
- Keep these positions from long-time contact with plastics to avoid fading.
- Synthetic leather may discolor, so the position in contact with the hair dye used should be covered by a towel.










Cleaning of the plastic parts

- Put a piece of soft cloth into water or neutral detergent contained hot water, wring it out and wipe the plastic parts.
 - Do not clean the product with chemicals such as thinners, gasoline and alcohol.
- Wipe with a piece of cloth once soaked in clean water and wrung out.
 - Wring the cloth out before using it to wipe the remote controller.
- Have the plastic parts take natural air drying.

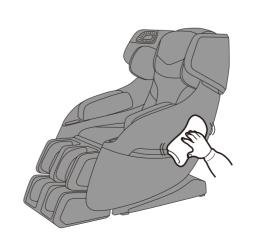







Questions and answers (Q&A)

Can persons paying frequent visits to hospitals because of diseases use the product?

These persons should consult physicians before using the product.

Massage is the so-called "touch-pressure stimulation": Muscles are compressed to relieve their tension and promote hemokinesis. Some diseases may get worsened because of massage. Thus, consult the attending doctors before using the product.



Are there any things needing special attention during moving?



Pay attention to the following things during moving.

Turn off the power switch and pull out the power plug.

 
- If the original packing box is unavailable, make sure the power line is not wound on the product, wind it and place it on the seat surface. When handling the product, keep the power line from falling off and rubbing with ground.
- If the original packing box is unavailable, properly keep other packing auxiliary materials and wrap the product with them to avoid scratch and vibration during handling.



Where is serial number of the product?



It is on back of the main body.



I care about the sounds the product makes when being used.

A It is caused by the core structure.

Does it matter if the massage wheels have different massage intensities?

This phenomenon possibly exits during massage because of the core structure.

To simulate the most natural massage effect, the product is designed with a core structure allowing alternate back massage by a left massage wheel and a right massage wheel. During massage, the massage wheels possibly have slightly different positions on the back. That's why you have that feeling. It is not a



How about monthly power consumption of the product?



Supposing you massage for 30 minutes in two times (15 minutes for each time) on each day, about 1.0 kilowatt-hours will be consumed each month.

Troubleshooting

After a fault happens, inspect and try the corresponding method below.

If the fault still exists after that, contact the shop from which you bought the product.

Fault

The massage wheels stop during use

(The product beeps and all icons and buttons on the remote controller flicker and then go out.)

The product cannot tilt, or the footrest cannot be raised or lowered

(The product beeps, the running light on the remote controller go out and the product stops)

The massage wheels cannot reach the shoulders or the neck

The left and right massage wheels have different heights (intensities)

The product cannot run at

- Upper body (the neck to the waist) massage
- waist) massage ● Lower leg/foot massage

Cause and elimination method

For safety, the massage wheels will possibly stop upon a too large external force during use.

If all marks and buttons on the remote controllerbegin to flicker, it suggests an extreme abnormality. In this case, turn off the power switch and turn it on about 10 seconds later.

If the massage wheels stop again, adjust your sitting posture and do not lean on the backrest completely. (Users, particularly those heavier than 100 kilograms, should follow relevant precautions.)

For safety, the product will stop upon an obstruction or a too large force.

If all contents and buttons are flickering and the backrest or the footrest has stopped, turn off the power supply and turn it on about 10 seconds later and then operate the product.

If the head is not in contact with the headrest, or the back is not in contact with the backrest, the shoulder position in body type detection will possibly be lower than the actual position. Sit in the deepest position of the product, lean your head on the headrest and operate from the beginning again.

It is not a fault but a normal phenomenon because the product is provided with a massage core allowing alternate beats of the massage wheels.

- The power line is disconnected.
- The power switch is not turned on.
- No program is selected after ON button on the remote controller is pressed.

If above solution are not applicable ,kindly contact OGAWA service Center.

Troubleshooting (Continued)

The sounds and feelings you care about in use of the product

You will hear or have the following sounds or feelings when using the product. It is not abnormal phenomena but results of the product structure.

- Sound when the stretching massages are retracted
- Sound and feeling when the massage wheels rub patterns on the fabric
- Sound of movements such as kneading and beat
- Friction sound of the running massage wheels
- Sound of up-down movement
- Sound of the conveyor belt
- Motor sound
- Sound of the squeezing massage wheels when they begin to stretch
- Sound when a person is sitting on the seat
- Friction sound between the armrests and the back cushion when the backrest is tilting
- Friction sound between the massage wheels and the fabric
- Sound of the inflator pump during Air Bag massage
- Sound of air exhaust during Air Bag massage
- Running sound of the solenoid valve at bottom of the product during Air Bag massage.
- Swing of the footrest
- Sound when the shoulders are stretched or moved
- Running sound of the air bags
- Sliding sound of the foot massage section
- Friction sound between the back cushion and the back cover leather when the backrest is tilting

If the sound is loud, it is also possible that the product has failed.

In this case, please contact our customer service hotline.


🕂 Warning

 Do not refit, disassemble or repair the product without permission.

Otherwise fires, abnormal movements or personal injuries may happen.

⚠ Warning

- In the case of any abnormality or fault, stop the product immediately and pull out the power plug to avoid fuming, fires and electric shocks.
 - < Abnormality and fault examples>
- The product fails to work after the power switch is turned to the ON position;
- After the power line is moved, the product is discontinuously powered on;
- In use, the product gives off a burning smell or an abnormal sound;
- The product is deformed or abnormally heating
- → please contact our customer service hotline.

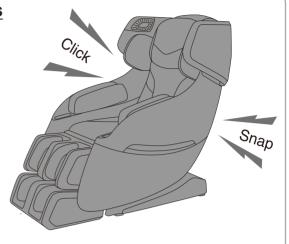

Specifications

Power supply		AC 220-240V~, 50-60Hz
Power consumption		65W
Upper body massage	Range of massage (up-down direction)	Approx. 88cm±5%
	Range of massage (left-right direction)	Massage wheel spacing (including massage wheel width) during use of the product Massage wheel spacing (including massage wheel width) during rolling on the back and up-down moving: Approx. 4cm~13cm
	Massage speed	Kneading: Approx. 16 times/min. ~ approx. 30 times/min. Beat: Approx. 52 times/min. ~ approx. 72 times/min. (single side) Moving speed: Approx. 2.5 ~ approx. 5.5cm/s±10%
Angle of inclination		Backrest: Approx. 118°~135° Footrest: Approx. 110°~164°
Automatic power-off		Approx. 15 minutes (automatic power-off)
Dimensions	When it is not tilting: (LXWXH)	Approx. 140.3cm*70.6cm*107cm
	When it is tilting: (LXWXH)	Approx. 163.2cm*70.6cm*92cm
Weight		Approx. 66kg
Dimensions of packing box (LXWXH)		Approx. 148.5cm*75.5cm*116m
Weight (including the packing box)		Approx. 81kg
Maximum body weight of user		100kg

For a user heavier than 100 kilograms, the product may have bigger noise and its fabric housing may be worn quicker.

Contact Us

MALAYSIA

Healthy World Lifestyle Sdn Bhd No. 22 Jalan Anggerik Mokara 31/47 Kota Kemuning, 40460 Shah Alam Selangor Darul Ehsan, Malaysia

Tel: +1-800-88-4688 Fax: +603-5121 4386

SINGAPORE

OGAWA Health-Care Pte Ltd 163, Kallang Way #07-11 Singapore 349256 Tel:+065-6846 8588

Fax:+065-6846 7677

PHILIPPINES

O-Healthcare Solution Phil. Inc. 2303, 4th Floor, G&A Building, Chino Roces Avenue Extension, Makati City, Philippines

Tel: +632 8889 0676/ +632 8844 6851

Fax: +632 8812 0421

HONG KONG, CHINA

OGAWA Health Care International (HK) Ltd

31/F,YHC Tower,1 Sheung Yuet Road

Kowloon Bay Kowloon Hong Kong

Tel:+852 3465 6262

Fax:+852 2410 0119

VIETNAM

OGAWA Vietnam Co Ltd 2nd floor,Petroland Tower, 12 Tan Trao,Tan Phu ward

District 7 Ho Chi Minh

Tel:+84 8 3775 3093/3775 3094

Fax:+84 8 3775 3095



000WQ

VIVRE

User Manual
All information is correct at the time of print



使用前

10 41 10 11		
	● 重要的安全事項 SC1	ı
	● 接地說明	5
	● 產品結構	3
	設置按摩椅 · · · · · · · · · · · · · · · · · · ·	7
	● 使用前 · · · · · · · · · · · · · · · · · · ·	}
使用フ	法	
		— 1
	● 按摩結束 ・・・・・・・・・・・・・・・・ SC1	3
//>		
維護		
	● 清洗及保養	4
Q&A	重要事項	
	• Q&A	5
	故障檢修	6
	● 規格 ······· SC1	8
	● 聯繫我們 · · · · · · · · · · · · · · · · · · ·	9

重要的安全事項(必須遵守)

下文列舉的是使用中為防止人身、財產損害而必須嚴格遵守的安全事項。

■ 所有安全事項將根據因錯誤使用而導致危害或損害的程度,予以說明。

可能造成重傷或死亡後果的事項内容。

可能造成輕傷或財產損害的事項內容。

■ 請注意各安全事項前的符號。(下文為符號範例)



絕對禁止事項。



必須執行事項。

- 正在接受治療或有下列症狀的人, 在使用本機前, 應諮詢醫師。
 - (1)佩戴起搏器或其他易受電子干擾的體內植入 型電子醫療器械的人
 - (2)惡性腫瘤病人
 - (3)心臟病人
 - (4)被查證喪失辨別溫度能力的人
 - (5)孕婦或剛完成分娩的人
 - (6) 因糖尿病等高度末梢迴圈障礙引起知覺障礙的人
 - (7)骨質疏鬆症患者、脊柱骨折病人、患有扭傷或肌 肉拉傷等急性疼痛疾病的人
- (8)按摩部位受傷的人
- (9)體溫在38℃以上(有發熱症狀)的人
- (10)必須靜養或身體顯著不適的人
- (11) 脊柱異常或脊柱彎曲的人
- (12)患有椎間盤突出的人
- (13)除上述之外,身體感覺特別不適的人

否則恐發事故或造成身體不適。

● 使用中感到身體異常,請立即停止使用,並諮詢醫師。

否則恐發事故或造成身體不適。

- 按摩中或移動靠背、小腿、腳部按摩部時,請事先確認本機周圍(本機後面、下面、前面和側面) 沒有人或寵物。
- 使用前請務必確認靠背和後蓋之間無異物或者寵物。



否則恐發事故或造成身體不適。

● 在使用本機前,一定要掀開靠墊,以檢查靠背覆蓋在按摩輪活動範圍上的面料是否破損或者其他部 位的面料是否破損。

(無論發現多麼細小的破損,都請立即停止使用,拔掉電源插頭,並將本機報修。)

在面料破損的情況下使用本機,可以引發受傷或觸電的危險。

- 每次按摩請控制在30分鐘内。
- 請將對身體同一部位的按摩控制在5分鐘内。

否則可能出現負面效果並造成傷害。

● 每次使用完畢,應將電源開關滑到"O"(關閉)位置,拔掉電源插頭。

否則可能因兒童誤用引發事故或造成傷害。

- 請嚴格遵守插座和配線器具的使用規定。
- 請使用220-240V~, 50-60Hz交流電。 (請勿在國外使用本品,或擅自連接變壓器。) 否則可能引發觸電、機體故障或因過熱導致火災。
- 請務必將電源插頭插到底,使其確實地插入插座中。 否則可能引發觸電或因過熱導致火災。

♠ 警告

● 請定期清理電源插頭上的灰塵等髒污。

否則可能引發絕緣不良,從而導致火災。 (請用乾燥的抹布擦拭電源插頭。)



● 發生異常、故障時,立即停止使用,拔掉電源插頭。(否則可能冒煙、起火、觸電)

(異常、故障事例)。

- 接通電源開關後不啟動。
- 移動電源線,有時通電有時不通電。
- 運行中發出焦臭味、異常聲響。
- 按摩椅變形或者異常發熱。

● 請勿將靠墊伸入靠背和後蓋之間。

否則可能會導致機體故障。

● 請握住邊框進行本機搬送。

否則可能會導致機體故障或人身傷害。

● 下列人員請勿使用本機。

被醫生禁止按摩的人(例:患有血栓症、重度動脈瘤、急性靜脈瘤、各種皮膚炎或皮膚感染症(包括患皮下組織炎症)的人等)

否則可能會導致病情惡化。

- ▼下列人員請勿使用腰部按摩。
 - 患有急性腰痛、椎間盤突出症、腰椎移位症的人
 - 罹患變形性髖關節症等髖關節不適的人 否則可能會導致病情惡化。
- 在使用中請勿將手、手臂、腳塞入靠背覆蓋在按摩輪活動範圍上的面料。
- 兒童禁止使用本機。此外,請勿讓兒童在本機上玩耍,或者爬到小腿●腳部按摩部、座面、靠背或扶手上。
- 請勿攀爬靠背或者扶手。
- 請勿倚背或坐在靠背上。
- 請勿將頭伸入靠背和後蓋之間的活動區域。
- 請勿讓不能表達自己意思的人或沒有能力操作本機的使用本機。
- 按摩頸部時,請注意按摩輪的動向,請勿按摩前頸,請避免過重地按摩頸部。 否則可能會引起事故或造成傷害。
- 請勿損壞電源線及電源插頭

(請避免此類行為: 損傷、加工、強行彎曲、扭轉、拉長電源線及電源插頭,或將電源線及電源 插頭靠近發熱器,或在電源線及電源插頭上系重物、或任意捆綁。)

使用破損的電源線或電源插頭,可能引起觸電、短路或引發火災。



●請勿用沾濕的手插、拔電源插頭。

否則可能導致觸電事故。



●請勿擅自改造本機。請勿自行分解或修理本機。

否則可能導致起火、異常動作、人身傷害。

- ▼下列人員即使目前身體健康,也請諮詢醫師後再使用本機。
 - (1)因年齡增長而導致肌肉萎縮的人或身體纖瘦的人 (2)因骨頭或内臟問題而感覺腰痛的人
 - 3)容易扭傷或容易瘀傷的人
 - (4)量車、量船或乘坐其他交通工具時,反應異常激烈的人
 - (5)過去曾被施予心臟手術或其它内臟手術的人

否則可能有損自身健康。

● 就坐前,請先確認本機各個部件之間沒有異物。

(確認後蓋、靠背、座面、小腿●腳部按摩部、靠墊内側沒有夾雜異物。)

否則可能因手、腳或其他物件被本機夾住,而引發事故、造成傷害或機體故障。

- 頭部佩戴任何硬質飾物(如髮卡等)時請勿使用本機。
- 當褲子口袋內部有硬物時(如手機、鑰匙等),將其取出,然後按摩。
- 就座前,確認按摩輪處在收納位置。
- 按摩途中若想離開座位,必須先停止按摩椅運作,再離開座位。

否則可能引發事故或造成傷害。



●請勿扯電源線試圖拔出電源插頭,一定要握住插頭本身將其拔出。

否則可能引發觸電或短路。

●移動本機前,必須把小腿●腳部按摩部的角度調節回最初位置。

否則可能造成傷害。

● 如果使用滑輪滾動本機, 在地板上墊上墊子等。

否則可能在地板上留下傷痕。

●使用滑輪移動本機前,須先清空周圍障礙物,抬起小腿。腳部按摩部座面到略低於腰的位置,慢慢

否則可能因機身翻倒引發事故或造成傷害。

● 須將本機放置在水平面上使用。

否則可能因機身翻倒引發事故。

● 因使用本產品而產生出疹、紅腫、發癢等症狀時,請立即停止使用,並諮詢醫師。 否則可能引發事故或導致身體不適。

● 請勿將頭部、腹部或皮膚緊貼按摩輪。此外,請勿將手或腳伸入按摩輪之間。

● 閒置一段時間後使用本品,請先重新閱讀—遍產品使用說明書,並確認機體運作正常後, 再開始使用。

否則可能引發事故或造成傷害。

請勿和其他器械同時使用。

否則可能造成事故或引起身體不適。



- 請勿將膝蓋夾在小腿和腳部按摩部之間。
- 勿在使用本機時入睡。此外,飲酒後請勿使用本機。
- 當鼓起的座面氣囊裡的空氣沒有被排放完時,不要站在座面上,或者跳上去,或者在上面放東西。 否則可能導致事故、傷害。

注意

- ●請勿將手或腳伸入本機與小腿●腳部按摩部之間。
- ●請勿將手•手臂或頭伸入小腿•腳部按摩部(腳置台)的縫隙間。 安全起見,結束按摩後,請一定要收納好小腿•腳部按摩部。
- ●請勿將手、手臂或頭伸入靠背和後蓋之間。
- ●請勿將寵物放在按摩椅上(後蓋、靠背、扶手等)。
- 按摩中,請勿突然拔出電源播頭、或突然關閉電源開關。 否則可能造成傷害。
- ●請勿站立或坐在後蓋上。

否則可能導致本機翻倒,造成人身傷害。

●請勿站立或坐在扶手上。

否則可能導致人身傷害。



● 請勿站立或坐在小腿●腳部按摩部及腳置臺上。

否則腳置台前部旋轉或本機傾倒可能導致事故、傷害。 小腿●腳部按摩部底部撞到地板時,可能損壞地板。

● 請勿在已安裝好的狀態下托動或推動本機。

否則可能損壞地板。

● 請勿在有人入座時移動本機。

否則可能因機身翻倒引發事故或造成傷害。

● 請勿在電熱毯等加熱設備上使用本機。

否則可能引起火災。



禁止濕手觸碰

●請勿在浴室或其他潮濕的地方使用本機。

否則可能引發觸發或機體故障。



●請勿將水滴等物質撒在本機或遙控器上。

否則可能引發觸電、短路或引起機體故障。

● 清洗及保養本機,必須先從插座上拔出電源插頭。 否則可能引發觸電或造成傷害。



● 停電時立刻拔出電源插頭。

否則可能在恢復供電時導致事故、傷害。

●不用時,一定要從插座上拔出電源插頭。

否則灰塵、濕氣可能導致絕緣老化,引發漏電火災。

警告:

- 1.8歲及以上兒童,身體、感官或精神能力減退人羣,缺乏經驗和按摩知識人羣,在接受有關安全使用本設備的 監督或指導,並瞭解相關危險的前提下,可以使用本設備;
 - 兒童不得在本設備上玩耍,不得在沒有監督的情況下進行本設備的清潔和維護。
- 2.器具有發熱表面,對熱不敏感的人使用時必須注意。


接地說明

- ●本機必須接地。如果本機發生功能故障,可以使用接地來減少觸電危險。
- ●本機裝備了具有設備接地導線和接地插頭的電源線。必須將該插頭插入已完全依照當地代碼和法令進行 正確安裝和接地的、合適的插座。

注意

- 若設備接地導線的連接不當,則會導致觸電危險。如果您對本機的接地是否正確存有疑問,請委託專業電工進行檢查。即使本機附帶的插頭與插座不配,也不能對其進行改造。請委託專業電工安裝合適的插座。
- 本機具有接地插頭。請確認本機連接至具有與插頭形狀匹配的插座。
- 本機不能使用轉接插座。
- 如果電源線損壞,請停止使用並與我們的客戶服務部聯絡。
- 下列症狀的人(包括兒童): 身體殘障人員、精神缺陷人員,禁止使用本機。如果一定要使用本機,必須在專業人員指導下使用。
- 12歲以下兒童不能使用本機或在本機上玩耍。
- 在監督下,或者有經過有關使用本產品安全的方式和理解其危害性的指導,此設備可以讓年齡從8歲以上兒童, 肢體, 感官或心智慧力有缺陷, 或者缺乏經驗知識的人使用。


産品結構

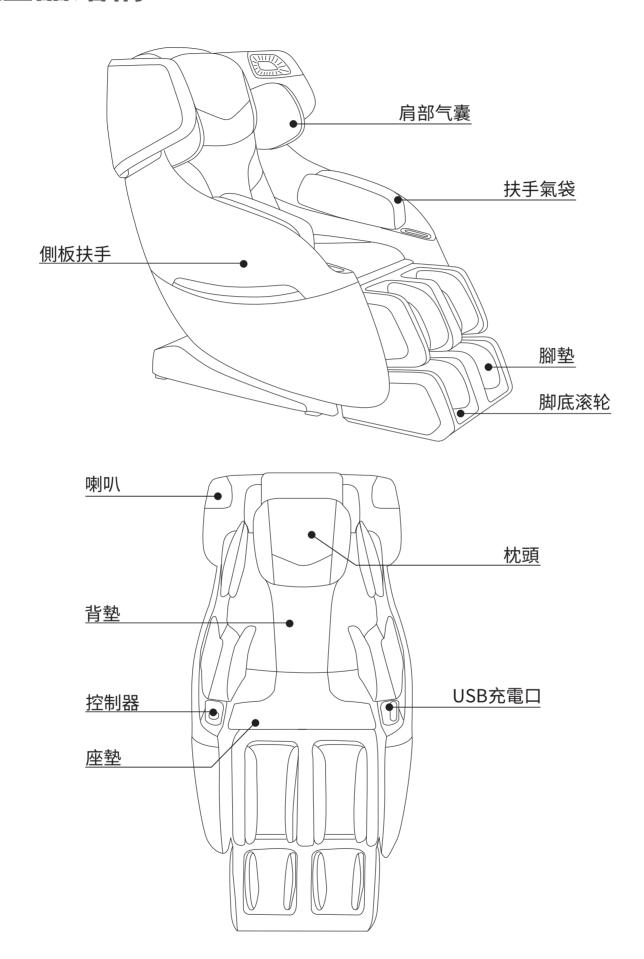

設置按摩椅

使用前(安裝位置)

● 確保足夠空間以便按摩椅可以傾斜。

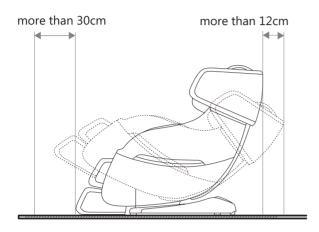


- 請勿將按摩椅暴露於陽光直射或高溫環境下(如加熱設備前),因為這樣可能導致按摩椅合成皮革褪色或硬化。
- 為避免地板損傷,請在本機下鋪上墊子。平鋪墊子時,墊子的大小應足以蓋住本機接觸地板的範圍與腿置台接觸地板的範圍(至少150cm*80cm),如圖所示。
- 安裝本機時應靠近電源插座。

2

產品移動說明

● 翹起按摩椅的前部,手推移動。

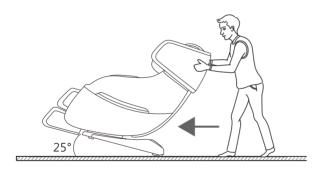

※注意:

- 在移動按摩椅時一定要把腿墊完全收回,若不遵守,在 移動過程中腿墊收到原始位置,有可能導致受傷的情況。
- 當有人坐在按摩椅上時,請不要移動椅子。
- 移動按摩椅時可能會損傷地板,建議在本產品下鋪上墊子等。

由於本機較重,因此搬運時請小心, 以免造成背部拉傷。

本機重量

約66kg

將本機放置在地板上

- 緩慢地放下本機,小心腳部被壓傷。
- 直到機身完全放平前,請勿放開腿置台。突然鬆手,將導致腿置台彈回最初位置。
- ●地板可能受損,因此,建議在地板上鋪上 墊子等物料。

注意

- 請勿在安裝好的狀態下托動或推動本機。
- 請勿握住視窗邊框進行本機搬動。


否則可能會導致機體故障或人身傷害。

不要在地板上使用滑輪移動。
 否則可能在地板上留下傷痕。

- **請勿在有人入座時移動本機**。 否則可能因跌倒導致事故、傷害。
- **移動本機時,不要握持腳部按摩部分。** 移動在滑動可能導致傷害。

使用前

檢查周圍

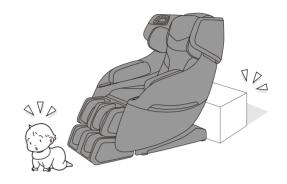

2

卷起靠墊並以拉鍊固定

卷起靠墊並以拉鍊固定在本體上。




3

確保本機縫隙間沒有異物

小腿.腳部按摩前,確認沒有夾住異物

- 不要將手、手指、腳、頭伸進小腿與座面、扶手的 間隙中間。
- 就坐前,請先確認本機各個部件之間沒有異物。
- 請勿將寵物放在按摩椅上(後蓋、靠背等)。

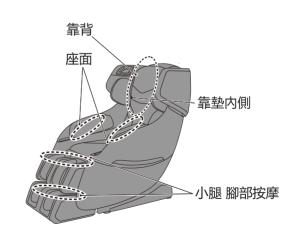

4

檢查電源線及電源插頭

♠ 警告

請定期清理電源插頭上的灰塵等髒汙。


否則可能因濕氣等原因引發絕緣不良,從而導致引發火災。

(請用乾燥的抹布擦試電源插頭。)

請勿損壞電源線及電源插頭。


(請避免此類行為:損傷、加工、強行彎曲、扭轉、 拉長電源線及電源插頭,或將電源線及電源插頭靠 近發熱器,或在電源線及電源插頭上系重物、或任 意捆綁。)

使用破損的電源線或電源插頭,可能引起觸電、短路或引發火災。請到購買本機的商店或指定的維修中心諮詢修理電源線或電源插頭的方法。

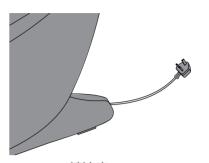

請注意 , 不要被電源線絆住腳部等。

 務必將接口完全推入設備 電源輸入插口。



5


打開電源

- 1 將電源插頭插入電源插座。
- ② 將電源開關滑到 "I" (開啟)的位置。

♠ 警告

- **請務必將電源插頭插到底,使其確實地插入插座中。** 否則可能引發觸電或因過熱導致火災。
- ●請嚴格遵守插座和配線器具的使用規定。
- ●請使用220-240V~50/60Hz交流電。 (請勿在國外使用本品、或擅自連接變壓器。) 否則可能引起觸電、機體故障或因過熱導致火災。
- ●請勿用沾濕的手插、拔電源插頭。



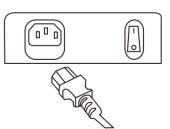

使用前(續)



確認按摩輪處於收納位置




按摩輪不處於收納位置時,

按下開機鍵返回收納位置。

7

確認面料未破損或存在裂縫

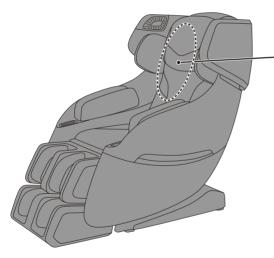

- 檢查區域:


靠背覆蓋在按摩輪活動範圍上的面料

⚠警告

●在使用本機前,一定要掀開靠墊,以檢查圖示區域 面料是否破損,其他部分也要確認面料是否破損。 (無論發現多麼細小的破損,都請立刻停止使用, 拔掉電源插頭,並將本機送修。)

在面料破損情況下使用本機,可能引發傷害或觸電的危險。

操作指南

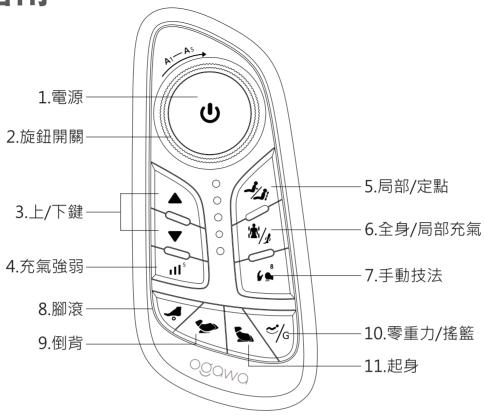

注意:所有按摩功能的默認時間爲分鐘,椅子將在使用15分鐘後關閉。

1. 電源鍵

按下電源鍵後,按摩椅處於開機狀態並且電源燈常亮,按下功能鍵開始時執行按摩功能並同步計時,再次按下電源鍵開機,按摩球歸位,按摩椅背也歸位。

2. 旋鈕開關

轉動旋鈕可以選擇不同按摩程式執行,A1全身放鬆>A2腰部舒緩>A3頭肩放鬆>A4睡眠舒緩>A5活力放鬆>關閉,依次迴圈。

3. 上/下鍵

手動模式下執行任一按摩手法,再執行定點功能,可用上/下鍵控制按摩球高度。

4. 充氣強弱

可以控制氣袋按摩力度大小。

5. 局部/定點

手動模式下,可以控制按摩球分別在全背>定點>局部,依此迴圈。

6. 全身/局部氣壓按摩

手動模式下,按下此按鍵執行輪流充氣 手肩與腿腳>手部&肩部充氣>腿部&腳部充氣> 關閉,依此迴圈。

7. 手動技法

按下此按鍵按摩球可以執行手動手法 揉捏>捶打>敲擊>指壓>敲拍>瑞典>連擊>行走> 關閉,依此迴圈。

8. 腳滾

按下此按鍵可控制腳底滾輪開關。

9. 倒背

按下此按鍵可以讓靠背執行到最大角度。

10. 零重力/伸展/搖籃模式

短按一次零重力一檔,短按第二次進入零重力二檔,長按3秒進入伸展/搖籃模式,零重力狀態下再短按一次,整機歸位。

11. 起身


按下此按鍵可以讓靠背恢復到初始角度。

藍牙音樂功能

手機播放音樂: 先打開手機藍牙功能, 然後選擇按摩椅音箱藍牙設備, (OGAWA-OG52 08-XXXXX)。待手機自動匹配好按摩椅音箱, 即可通過按摩椅音箱播放手機音樂功能。 藍牙首次連接需要輸入PIN碼, 密碼是9999。

按摩結束

切斷電源

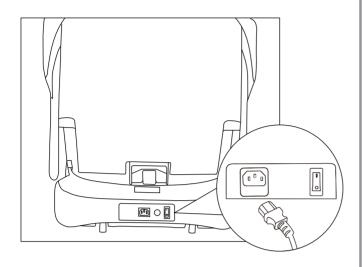

- ① "關閉""O" 電源開關
- ② 拔下電源插頭



⚠ 警告

● 每次使用完畢,應將電源開關滑到"O"(關閉) 位置,拔掉電源插頭。

否則可能因兒童誤用引發事故或造成傷害。

關於定時器功能

按摩開始後啟動定時功能,定時時間 到後將自動結束。

- 小腿、腳部按摩部將保持原位。
- 按摩輪將移動到收納位置。
- 靠背不會自動升起。如果手控器已關閉,按開關鍵,靠背小腿收回原始位置。

清洗及保養

清潔合成皮革部分

使用柔軟的乾布擦拭皮革。

- 切勿使用諸如稀釋劑、汽油、酒精等化學品清潔本機。
- 使用市面銷售的皮革保養品(抹布)時,請遵照其使用說明。
- 如果合成皮革特別髒,則通過以下方式擦拭。
 - ①將軟布浸入水中或含3%至5%中性洗滌劑的熱水中,然後徹底擰乾。
 - ②使用上述軟布擦拭皮革表面。
 - ③使用浸過清水且已徹底擰乾的布料擦掉清潔液。
 - ④使用擰乾的軟布擦拭。
 - ⑤使其自然風乾。
- 難以去除汙漬時,請將市面上購買的三聚氰胺泡棉浸入中性洗劑中, 然後且它擦拭本機。
- 不要使用吹風機吹幹表面。
- 由於布料的顏色會染到合成皮革的表面上,因此在使用牛仔布和彩色布料擦拭本機時務必小心。
- 不要使這些部位長時間與塑膠接觸,因為這會導致褪色。
- 合成皮革有變色的可能,所以在使用染髮劑時,請將接觸的部分用 毛巾覆蓋。




 






- 1 將軟布浸入水中或含有中性洗滌劑的熱水中,擰乾後,擦拭本機塑膠部。
 - 切勿使用諸如稀釋劑、汽油、酒精等化學品清潔本機。
- 2 使用浸有清水且已徹底擰乾的布料擦拭。
 - 擦拭遙控器前請務必擰乾布料。
- 3 使其自然風乾。

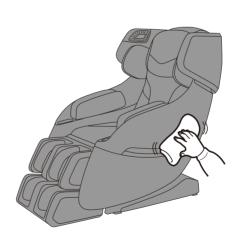





疑問解答(Q&A)

因為生病而經常出入醫院的人可以

經常出入醫院的人,請在與醫生商量 A 的前提下使用本品。

按摩即所謂"觸壓刺激",即通過對肌肉進行壓迫, 緩解肌肉緊張,促進血液流動。根據不同的病因, 按摩有可能造成病情惡化,因此請務必在和主治醫 生商量之後使用本品。

搬家時,有什麼需要特別注意的地方?


請注意以下事項。

關閉電源開關,拔出電源插頭。

- 在有原紙箱的情況下,請先確認電源線未被纏繞在本機上, 將電源線纏好放在座面上,搬運的時間請注意電源線沒有掉 落且未與地面發生摩擦。
- 在沒有原裝紙箱的情況下,為了防止機體劃傷和搬運中的 震動,請妥善使用其它包裝輔材包裹本品。

請問在哪裡可以看到產品的製造編號?

在按摩椅主體背面的座面下。

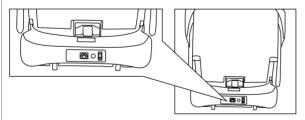

有點在意按摩椅運作時發出的聲音......

按摩椅運作時產生的聲音,一般是由於機 芯構造而發出的。

按摩中感覺左右兩邊按摩輪的 按摩力度有差異,要緊嗎?

由於機芯構造,在按摩過程中,確有可能 感覺左右按摩輪的力度有差異。

為了能夠模擬出最自然的按摩手法,本品機芯採用了允許 左右按摩輪交替捶背的機芯構造。在按摩過程中,左右按 摩輪接觸背部的具體位置可能稍有差異,從而導致了使用 者產生左右兩側按摩力度有所不同的感覺。此時,本品本 身並未發生故障。

使用本品時每個月耗電量是多少?

按每日30分鐘,使用頻率來計算,每月 本品耗電量約為1.0度。

發生故障後,首先檢查並嘗試以下方法。

如果在嘗試後,故障依然存在,請聯繫銷售店。

問題

在使用本機過程中按摩輪停止 (按摩椅發出"嗶嗶嗶"的聲音,

、按摩何發出 嗶嗶嗶 的耸自 遙控器上所有的顯示圖示和按 鈕閃爍,然後熄滅)

不能傾斜

小腿不能升高降低

(發生"嗶嗶嗶"的聲音,遙控器 的運行指示燈熄滅並停止運行)

按摩輪沒有達到肩部 或頸部的位置

左右按摩輪的高度(強度)不同

本機根本無法運行

- ●上半身(頸部至腰部)按摩
- ●小腿和腳部按摩

本機已受損

電源線或電源插頭異常發熱

原因和處理方法

在使用過程中,按摩輪遇到過大的外力時,出於安全考慮,按摩輪可能會這止移動。

如果遙控器上的所有標記和按鈕開始閃爍,這種情況極為異常,請關閉電源開關,等待約10秒鐘,然後再次打開電源。如果按摩輪再次停止,請調整自己的坐姿,不要使背部完全貼在靠背上。(應注意遵守相關注意事項,尤其是體重在100kg或以上的人使用時。)

如果本機遇到了障礙物或者在使用本機時用力過大,出於安全考慮,本機將停止工作。

當所有顯示的內容及按鈕在閃爍時,且靠背或小腿已停止工作。 關閉本機電源一次,約10秒鐘後再次打"開啟"電源,然後操作本機。

如果頭部沒有接觸到靠枕,或背部沒有接觸到靠背,在體型檢測過程中肩部位置可能低於實際位置。坐在座椅的最深位置,將頭部靠在靠枕上,然後從頭開始重新操作。

因為搭載了可進行按摩輪交互捶拍動作的按摩機芯,出現這種情況 純屬自然,並非機體故障。

- 電源線連接已斷開。
- 沒有打開本機電源開關。
- 按下遙控器上的開機鍵按鈕後,沒有選擇任何程式。

為防止事故發生,請務必與客戶服務聯繫。

若以上處理方法無效,請聯繫OGAWA客戶服務。

關於運行過程中本機發出的聲音和令人在意的感覺

在使用中會發生下述動作聲、感覺,不過這 是因按摩椅的結構而發生的,並非異常。

- 按摩輪由"伸出"改為"收回"時的聲音
- 動作時按摩輪擦過面料上的皺紋時發出的聲音和感覺
- 揉按、捶拍動作等的動作音
- 按摩輪動作時的摩擦聲
- 上下動作時的動作音
- 傳送帶的轉動音
- 電機音
- 按摩輪從"擠壓"改為"拉伸"時的聲音
- 落座時的聲音
- 靠背傾斜時扶手與靠墊的摩擦聲
- 按摩輪與布料的摩擦聲
- 氣囊按摩運作時的充氣泵工作音
- 氣囊按摩運作時的排氣音
- 氣囊按摩運作時座椅下電磁閥發出的工作音
- 腳置台的晃動
- 肩部伸展、動作時的聲音
- 氣囊的動作音
- 腳部按摩部的滑動音
- 靠背傾斜時,靠墊與後蓋上皮革摩擦時發出的聲音

當聲音變大時,也有可能發生了故障。

●此時,請與客戶服務聯絡。



⚠ 警告

● **請勿擅自改造本機。請勿自行分解或修理本機。** 否則可能導致起火、異常動作、人身傷害。

魚警告

- ●發生異常、故障時,立即停止使用,拔掉電源插頭。(否則可能冒煙、起火、觸電)
 - <異常、故障事例>
 - ●接通電源開關後可能不動作
 - ●移動電源線,有時通電有時不通電
 - ●運行中發出焦臭味、異常聲響
 - 按摩椅變形或者異常發熱

規格

電	源	AC 220-240V~, 50-60Hz
消 耗 電	力	65W
可 按 摩 範 (上 下 方 I		約88cm±5%
一 半 可按摩範 (左右方)		在使用本機過程中按摩輪間的距離(包括按摩輪的寬度) 背部滾動和上下移動過程中按摩輪間的距離(包括按摩輪的寬度):約4cm~13cm
按摩按摩速度	Ē	揉按:約16次/分鐘 ~約30次/分鐘 錘拍:約52次/分鐘 ~約72次/分鐘 移動速度:約2.5cm/s ~約 5.5cm/s
傾 斜 角	度	靠背:約118°~135° 小腿按摩部分:約110°~164°
自 動 關	閉	約15分鐘(自動斷電)
尺 未 傾 斜 (長X寬X語		140.3cm*70.6cm*107cm
何 斜 寸 (長X寬X語	時 高)	163.2cm*70.6cm*92cm
重	量	約66kg
包裝箱尺(長X寬X高)		148.5cm*75.5cm*116cm
重量(含包裝	(籍)	約81kg
用戶最大體	豊重	100kg

對于體重100kg或以上的人士,產品運作時可能產生更大的噪聲而且面料外置可能磨損得更快。

聯繫我們

MALAYSIA

Healthy World Lifestyle Sdn Bhd No. 22 Jalan Anggerik Mokara 31/47 Kota Kemuning, 40460 Shah Alam Selangor Darul Ehsan, Malaysia

Tel: +1-800-88-4688 Fax: +603-5121 4386

SINGAPORE

OGAWA Health-Care Pte Ltd 163, Kallang Way #07-11 Singapore 349256 Tel:+065-6846 8588 Fax:+065-6846 7677

PHILIPPINES

O-Healthcare Solution Phil. Inc. 2303, 4th Floor, G&A Building, Chino Roces Avenue Extension, Makati City, Philippines

Tel: +632 8889 0676/ +632 8844 6851

Fax: +632 8812 0421

HONG KONG, CHINA
OGAWA Health Care International (HK) Ltd
31/F,YHC Tower,1 Sheung Yuet Road
Kowloon Bay
Kowloon
Hong Kong

Tel:+852 3465 6262 Fax:+852 2410 0119

VIETNAM

OGAWA Vietnam Co Ltd 2nd floor,Petroland Tower, 12 Tan Trao,Tan Phu ward District 7 Ho Chi Minh

Tel:+84 8 3775 3093/3775 3094

Fax:+84 8 3775 3095





Ogawa is grateful to have received these awards:





Ogawa Wellness Hubs: Malaysia. Singapore. Vietnam. Philippines. Indonesia. Myanmar. India. China Hong Kong. Taiwan. Turkey. Pakistan. Mauritius. Russia. France. Canada Thailand. Korea. Au stralia. Dubai. K.S.A. Nigeria. Egypt. Lebanon. Denmark Sweden. U.S.A