



User Manual/说明书 OG 1104

*Please provide your order number before contacting customer support

Menu

Important And Safety Instruction 01
Preparation Before Use 04
Product Diagram 05
Directions For Use 09
Battery Disposal Instructions 14
Cleaning & Maintenance 14
Faulty Inspect And Reset 15
Warranty Claims 16
Contact Us

INPORTANT SAFETY INSTRUCTIONS

WARNING-When using the massager, the following precautions should be followed to avoid damage to the device and to reduce the risk of burns, fire, electric shock or injury to persons:

- 01. Inspect the massager and read the user manual carefully before use.
- 02. Do not charge the massager in an environment where temperature is below 0C/32°F or above 40 C/104°F. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- 03. Do not use the massager in an environment where the temperature is higher than 50 C/122°F.
- 04. Do not expose the massager to fire or excessive temperature. Exposure to fire or temperature above 130°C/266°F may cause explosion.
- 05. Do not use the massager in an environment where it could be exposed to steam or moisture (such as a bathroom).
- 06. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, seek medical help. Liquid ejected from the battery maycause rrttnburns.
- 07. Do not use the massager on wet skin.
- 08. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 09. If the massager is moved too quickly from a low-temperature environment to a warm environment, moisture may accumulate on internal metal parts, which might influence the normal operation of the product, or cause damage to it. To avoid this happening, avoid use for at least one hour after moving it between contrasting temperatures.
- Do not use a massager that is damaged or modified. A damaged or modified device may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- 11. If you encounter any of the following, please discontinue use of the massager and contact customerservice:
 - a. If it has a damaged charging cord, adapter or charging port.
 - b. If it is not working normally.
 - c. If it has been dropped or damaged.
 - d. If it has been submerged in water.
- Do not modify or attempt to repair the massager except as indicated in the instructions for use and care.
- 13. Stop using immediately if you feel discomfort during use.
- 14. Avoid using on or near the head to avoid injury or health risks.

- 15. Do not use on or near bony prominences.
- 16. Only use on soft tissue.
- 17. Stop using ifyou experience pain or discomfort.
- Do not use on areas that are hyper-sensitive or have diminished sensitivity due to nerve or circulatory issues.
- If you fall into any of the following groups, please consult a physician before using the product:
 - a. If you are pregnant or experiencing a menstrual cycle.
 - b. If you have osteoporosis or osteopenia.
 - c. If you have cardiovascular disease.
 - d. If you have neuropathy.
 - e. If you have a pacemaker or other implanted medical devices.
 - f. If you have an acute disease.
 - g. If you have an active/ open skin lesion and/ or trauma to the skin.
 - h. If you are post-operative and still under the direction of a medical practitioner.
- 20. Avoid using if you are impaired.
- 21. Close supervision is necessary when this device is used by, on, or near children and physically challenged individuals.
- 22. Do not fall asleep while operating the massager.
- 23. Do not use this product while driving.
- 24. Use this massager only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 25. Do not carry this massager by its charging cord or use its cord as a handle.
- 26. Do not use outdoors.
- 27. Prevent unintentional powering of the device. Ensure the switch is in the OFF-position before connecting the device to a power source, picking it up or carrying it. Carrying the device while your finger or fingers are on the ON/OFF switch or connecting the device to a power source with the switch in the ON-position can lead to accidents.

DANGER

To reduce the risk of electric shock:

- 01. Unplug from the electrical outlet before cleaning.
- 02. Do not reach for the massager if it falls into water. Unplug immediately.
- 03. Do not use while bathing or showering.
- 04. Do not place or store massager where it can fall or be pulled into a bathtub or sink. Do not place in or drop into water or other liquid.
- 05. Do not use massager in close proximity to loose clothing or jewelry.
- 06. Keep long hair away from massager while in use.
- 07. Do not tamper with or alter the unit in any way. There are no user-serviceable components or parts inside.
- This unit contains a rechargeable Lithium-ion battery, which is neither replaceable nor user-serviceable.
- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- 10. Avoid inserting objects into any opening.
- 11. To disconnect, power down (press trigger button until it powers down), then remove plug from outlet.
- 12. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- 13. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- This appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance (5V/2A).

PREPARATION BEFORE USE

PRODUCT DIAGRAM

Caution before use

Before use, please take off your jewelry to avoid discomfort during massage. If you feel uncomfortable during initial use or use, please stop using immediately and consult your physician.

Scope of application

Reduce muscle soreness, promote blood circulation, relieve muscle stiffness, and promote muscle recovery.


This product is only suitable for auxiliary relief, if you need treatment, please go to the hospital for treatment.

• About the status after use


The massage area may turn red for a short time, but it will return to normal after a while. The massage area may also leave indentation, but after a period of time will return to normal.

When the product is in use, it will stop working or even shut down when it is subjected to excessive resistance. This is the normal motor protection function of the product, and it can be used normally after it is restarted, not because the product is abnormal.

It is normal for the main engine to heat up slightly during charging and use.

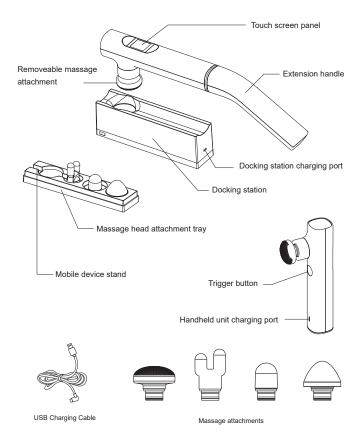

PRODUCT DIAGRAM

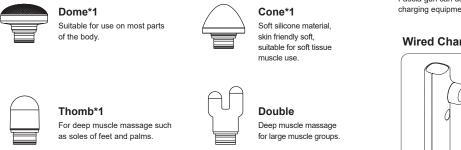


Note: Bullet massage head and U-shaped massage head material is relatively hard, not suitable for soft tissue massage, in case of muscle damage; When using for the first time, it is recommended to start from the lowest gear, and then raise the gear after the body slowly ADAPTS to the intensity.

PRODUCT DIAGRAM


Fascia gun can use wired charging and wireless charging two modes, charging process, charging equipment and products heating is a normal phenomenon.

Wired Charging

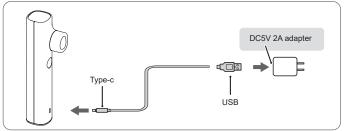


Wireless Charging

(Connect the charger to the base and put the product into the base to charge wirelessly)

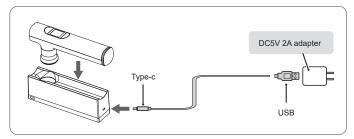

The fascia gun cannot be used when charging. During the charging process, the screen will display the charging status. Please remove the charger in time after charging.

Inside the package

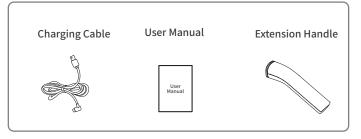


Note: This product does not include adapter, please purchase DC5V 2A adapter.

PRODUCT DIAGRAM


DIRECTIONS FOR USE

 Before installing the massage head, make sure the product is turned off




- 1. Insert the massage head into the mounting hole of the massage head on the fuselage and insert it firmly.
- When removing the massage head, please hold the root and pull it out straight. If it is more difficult, it can be pulled while rotating, and it can be easier to remove.
- if the massage head has stains, can use alcohol to wipe clean; Do not wash the massage head or any part of the product.

 Mounting extension handle



 Insert the extension handle into the mounting hole at the end of the fuselage and insert it firmly.



Press the Home button to wake up the fascia gun

On state:

1. When the fascia gun is in a non-working state, long press to shut down, short press to return to the upper-level menu;

2. When the fascia gun is in the working state, long press to lock the screen, the fascia gun can continue to work, in the locking screen, short press to wake up the fascia gun;

3. When the fascia gun is in the working state, short press to adjust the massage intensity of the fascia gun.

Note: When the fascia gun is in a non-working state, it can be long pressed to shut down.

The first time the fascia gun is opened, the boot boot will be entered, and the main menu can be entered after the boot setting is completed.

The fascia gun will be rebooted after factory Settings are restored.

A WARNING

- When using for the first time, please press the lowest setting to start using, after the body ADAPTS to the strength, then raise the massage gear; Use only one intensity for scalp and face massage.
- Use only on soft tissues, taking care to avoid nearby bones and joints to avoid damage.
- Due to the inevitable loss of high-frequency impact, it is normal for the product to run at a slightly larger volume. If there is noise or abnormal noise, please contact customer service.

DIRECTIONS FOR USE

DIRECTIONS FOR USE

 \bigcirc



Start

This mode has 4 speed massage intensity adjustable, short press the Home button to adjust the massage intensity.

In this mode

Short press Home to adjust the fascia gun gear, long press Home to lock the screen,

Tap the screen to pause the fascia gun or exit the massage.

Note: In this mode, the product will automatically stop after 10 minutes of operation.



Rhythm

This mode has 5 automatic massage programs built into the fascia gun, and different programs can experience different massage rhythms.

In this mode

Short press Home to adjust the fascia gun gear, long press Home to lock the screen,

Tap the screen to pause the fascia gun or exit the massage.

Note: In this mode, the product will automatically stop after 10 minutes of operation.





Sport

This mode is a fascia gun massage teaching guide, guiding users to use different massage heads in different parts of the body.

In this mode

Short press Home to adjust the fascia gun gear, long press Home to lock the screen,

Tap the screen to pause the fascia gun or exit the massage.



1



Set

In Setup mode, you can select different languages, switch prompt sounds, and restore factory Settings.

Note: Restoring factory Settings will restart the boot.



DIRECTIONS FOR USE

DIRECTIONS FOR USE



1

Stop

When the fascia gun is running, tap the screen to pause the fascia gun.

Click X to exit the current mode. Click b to continue massage.





Battery Low

When the fascia gun battery is too low, the screen will pop up a low battery reminder, please charge the fascia gun as soon as possible.

When charging, the screen will display the charging status. Please remove the charging device in time after it is full.

Note: Fascia gun cannot be used while charging.



Product Specifications

Product Name	Revive		
Model No.	OG 1104		
Input Voltage	5V=	Power Rating	10W
Current	2A	Battery Capacity	2200mAh
Working Time	10 minutes (product will automatically stop after 10 minutes).		
Product Weight	0.8 kg (included all massage head and docking)		
Charging Time	Wired charging, full charge about 4 hour Wireless charging 16H Can use for about 2 hour		

Error

When the fascia gun is in operation, if too much resistance is encountered, the fascia gun will enter overload protection and shut down.

Press the Home button to restart the machine.



BATTERY DISPOSAL INSTRUCTIONS

The lithium battery in this device is a valuable resource that can be recycled. When the device is at the end of its service life, remove the lithium battery and dispose of it at a facility or establishment that offers battery recycling services. This device should not be discarded with household waste.

CLEANING & MAINTENANCE

Storage

storage over than 3 months, the machine should be recharged after unpacking and inspection. Do not place it close to the floor, walls or roof. Indoor should be well ventilated, avoid intense sunlight illuminate and corrosive gas erosion.

Transport

The product package is equipped with simple anti-shake, suitable for air, railway, road and ship transportation, should avoid rain, snow splashing, inversion and collision.

Power inspection

Check the power supply. If the power supply voltage exceeds the specified range, do not start up and use.

Maintenance

Take measures to prevent moisture, rodents, and pollution. The cleaning should be done in the shutdown state. After use, place the instrument in a safe place, and never put heavy objects on the instrument. When a fault occurs, please ask professional and technical personnel to repair, non-professionals are not allowed to disassemble the product by themselves.

Disposal and Recovery

This product should not be discarded with household waste. When you decide to dispose of this product, please follow the local environmental laws and guidelines.

FAULTY INSPECT AND RESET

Please check if there is a fault in the operation. If the fault cannot be removed or the product still cannot be operated satisfactorily, please cut off the power supply and be repaired by professional technicians. Please do not disassemble the product by yourself!

Basic faults	Possible causes	Basic troubleshooting methods
Not turning on	Battery low	Please charging
Weak massage	Battery low	Please charging

Warranty Claims

- 1. Warranty is not transferable.
- 2. This warranty is effective only if the product is purchased from OGAWA.
- 3. Proof of purchase (original receipt) is required for all warranty repairs.
- 4. All implied warranties, including but not limited to these implied warranties of fitness and merchantability, are limited to the duration stated in the warranty policy.
- Damage due to misuse, improper treatment and unauthorized modification and repair are not covered by this warranty.
- Warranty does not cover accessories and attachments which do not belong to the massage unit.
- 7. Warranty is not effective to rental, business, commercial, institutional or other nonresidential users.
- All services covered by this warranty must be approved by OGAWA and repaired by authorized technicians only.
- If replacement parts for defective materials are not available, OGAWA reserves the right to make substitution in lieu of repair or replacement.

Contact Us



MALAYSIA Healthy World Lifestyle Sdn Bhd No.22 Jalan Anggerik Mokara 31/47 Kota Kemuning, 40460 Shah Alam Selangor Darul Ehsan, Malaysia Tel: +1800-88-4688 Fax:+603-5121 4386



HONGKONG

International (HK), Ltd 31/F, YHC Tower, 1 Sheung Yuet Road, Kowloon Bay, KLN, Hong Kong S.A.R. Tel: +852 2428 8823 Fax: +85 22410 0119



SINGAPORE OGAWA Health-Care Pte Ltd 163, Kallang Way #07-11 SINGAPORE 349256 Tel : +065-6846 8588 Fax : +065-6846 7677



VIETNAM OGAWA Vietnam 171, Nguyen Thi Thap Street Tan Phu Ward Dist 7 Ho Chi Minh City, Vietnam Tel : +84 8 3775 3093 / 3094 Fax : +84 8 3775 3095



PHILIPPINES

O-Healthcare Solution Phil. Inc. 2303, 4th Floor, G&A Building, Chino Roces Avenue Extension, Makati City, Philippines Tel: +632 889 0676/+632 844 6851 Fax:+632 812 0421

目录

安全注意事项	19
产品概览	23
使用说明	24
产品参数 ·	32
贮存与保养	33
产品弃置与回收	34
故障检查与处理	35
环保清单	36
联络我们	37


安全注意事项

●注意

本项所有内容均与安全有关,请用户务必遵守。本项中的注 意事项只是为了正确的使用本产品;注意事项中说明了危险、 危害的程度大小及可能发生的事故。

1. 请勿使用未经厂商许可的其他配件,若因此造成机器故障, 保修将自动终止。

2.请在拆除包装后检查产品是否有损伤,核对配件是否齐全。
 3.儿童及其他无行为能力人请在监护人监督下使用本产品。
 本产品只能够在授权的维修中心维修,在非授权维修中心维修时,易引发其他不安全因素。

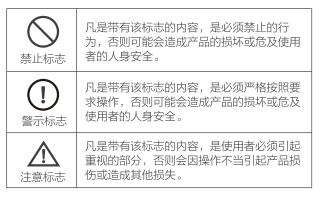

♡禁止

- 1. 下列人员严禁使用本机:
- ▶骨质疏松、颈椎病、扭伤或拉伤等患者;
- ▶急性腰痛、椎间盘突出、腰椎滑脱症等患者;
- ▶脊椎异常或病变患者;
- ▶皮肤病或皮肤感染患者;
- ▶具有心脑血管疾病或体内植入了电子医疗器械如起搏器的患者;
- ▶ 高血压或低血压的人群;
- ▶体温 38℃以上的人;
- ▶孕妇或刚完成分娩的妇女;
- ▶身体有创伤体表患者;
- ▶无人监管的 14 岁以下儿童及神志不清者;
- ▶恶性肿瘤患者;
- ▶热觉丧失者;
- ▶因糖尿病等造成严重末梢循环障碍引起的知觉障碍患者;
- ▶需静养和身体明显不适的人;
- ▶有过心脏或内脏器官手术的人;
- ▶容易扭伤或淤伤的人;
- ▶因年龄增长肌肉萎缩或纤瘦的人;
- ▶ 接受过关节置换手术或者有金属件植入如宫内避孕器的人;
- ▶除上述之外,身体不适的人。
- 2. 严禁水或其他腐蚀性液体流入机内。
- 3. 严禁私自改造机体结构或更换零件。
- 4. 严禁放置在靠近火源的区域或高温潮湿的环境中。
- 5. 禁止在颈部、心脏以及生殖器周围使用。
- 6.禁止在骨头上使用,在不产生疼痛及其他不适的情况下, 只能在身体软组织上使用本产品。

安全注意事项

- 7. 禁止将手指靠近按摩头的轴和背面,避免夹伤。
- 8. 严禁盖着被子或毛毯使用。
- 禁止用设备代替或补充医学治疗。如果您有疼痛,或正在 接受医学治疗,或使用其他医疗器械,在使用设备前,请 务必咨询您的医师。
- 10. 禁止将本产品用于放松肌肉之外的目的。

①警示

- 1. 禁止将杂物塞入按摩头与壳体间隙处。
- 2. 禁止将水等液体泼在产品上,以免短路引起事故。
- 3. 如果电源线或充电口损坏,切勿擅自拆卸修理,请及时与 售后联系进行处理。
- 4. 请使用与此产品匹配的电源适配器。
- 5. 清洁前必须拔离电源插头,以免造成设备或人身损害。
- 6. 不可使用未推荐的配件及附件。
- 7. 请勿在此产品外壳或电源线破损情况下使用。
- 8. 醉酒或感觉不适时请勿使用此产品。
- 9. 使用此产品时请勿过分用力,以免受伤。
- 10. 饭后一个小时内请勿使用本产品。
- 11. 颈背受伤或近期内动过手术者,请遵照医师的指示小心使用。
- 12. 严禁任何损坏电源线、电源插头等部件的行为(如过度扭曲、粗暴拉拽、放置重物等)。
- 13. 请勿在驾驶、睡觉、酒后等情况下使用。
- 14. 本产品为家用按摩保健产品,非医疗器械,不适用于诊断、 治疗和其他商业用途。

▲注意

- 本产品不可提供给身体有残障、感观或神经有缺陷或缺乏 经验与常识的人士(包括儿童)使用。
- 儿童必须由监护人监督,防止儿童将该产品当做玩具进行 玩耍。
- 3. 请勿使用湿手拔插电源插头。
- 4. 请勿使用大头针等尖锐的物品刺入产品。
- 5. 在使用中感到此产品有任何异常,请立即停止使用。
- 6. 使用此产品期间感到身体异常,请立即停止使用,并向医 生咨询。
- 7. 整机外观破损时应禁止使用。
- 8. 请勿在高度潮湿的环境如浴室中使用此产品。
- 9. 在环境温度急剧变化时请勿使用此产品。
- 10. 请勿在飞尘严重或有腐蚀性气体环境中使用此产品。
- 每次使用控制在 10 分钟以内,每天使用不能超过 2 次(约 20 分钟)。
- 12. 产品使用过程中,有焦味或异响时,应立即停止使用并关机。
- 13. 机器出现故障时,切勿私自处理,请到指定维修点维修。
- 14. 若使用本机出现身体发红、瘙痒等症状,请立即停止使用, 并咨询医生。
- 15. 请勿与其它医疗器械同时使用。
- 16. 收纳时,请勿将电源线材缠绕在机体上。
- 17. 长时间未使用时,请再次阅读说明书,确认机器可正常运 行后,再继续使用。

产品概览

● 使用前注意

- ▶ 使用前,请先取下佩戴的首饰,避免按摩时的不适。
- ▶ 初次使用及使用过程中,如有不适请立即停止使用并咨询医师。

● 适用范围

- ▶ 减轻肌肉酸痛,促进血液循环,缓解肌肉僵硬,促进肌肉恢复。
- ▶ 仅在软组织出使用,注意避开附近的骨头及关节,以免造成损伤。
- ▶本产品只适合辅助缓解作用,如需治疗请到医院就医治疗。

● 关于使用后的状态

▶ 按摩部位有可能短时间变红,但是过一段时间之后就会恢复原状。按摩部位也可能留下压痕,但是过一段时间之后就会恢复原状。


● 其它

- ▶ 在使用中产品遭受过大阻力会停止工作甚至关机,这是产品正常的电机保护功能,重新开机即可正常使用,并非产品出现异常。
- ▶ 充电和使用过程中, 主机稍稍发热属于正常现象。
- ▶由于高频冲击不可避免的损耗,产品运行音量稍微变大属于正常现象,若出现杂音、异响,请联系客服处理。
- ▶避免同一部位按摩时间过长,带来肌肉损伤。

● 使用前准备

- 1. 检查产品及配件是否完整, 如有破损请勿使用。
- 2. 检查电池电量是否充足,如电量低请先充电再使用。



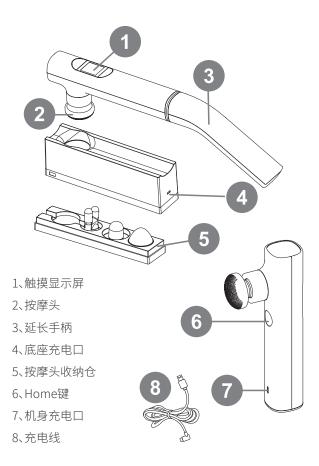

使用说明



圆顶按摩头(1个) 常用按摩头,适用于身 体大部位位置使用。







注:子弹按摩头跟U型按摩头材质比较坚硬,不适用于软组织按摩,以防损伤 肌肉;初次使用时,建议从最低档开始使用,待身体慢慢适应强度后再提升 档位。




注:本产品不含适配器,请自行购买5V === 2A适配器。


使用说明

筋膜枪可使用有线充电跟无线充电两种模式,充电过程中,充电设备及产品发热属于正常现象。

有线充电

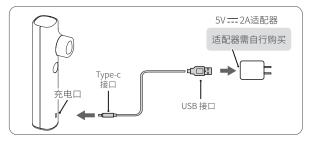

无线充电 (将充电器连接底座,把产品放入底座即可无线充电)

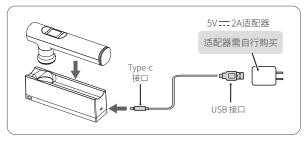

筋膜枪充电时无法使用,充电过程中,屏幕会显示充电状态, 充电完成后请及时移除充电器。

使用说明

 
安装按摩头之前,请确保产品已经关机



1、将按摩头插入机身的按摩头安装孔,并用力插紧。

- 2、取下按摩头的时候,请拿住根部,笔直地拔出来。如果比 较困难的话,可以一边转动一边拔,能比较容易取下。
- 3、如按摩头有污渍,可使用酒精擦拭清洁;按摩头及产品 任何部位不可使用水洗。

安装延长手柄




将延长手柄插入机身尾部安装孔,并用力插紧即可。

使用说明

使用说明

产品开机

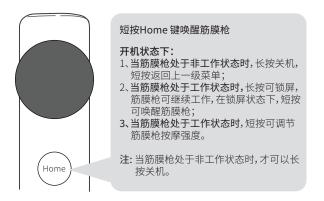



快速启动

该模式有4挡按摩强度可调,短 按Home键可调节按摩强度。 在该模式下

短按Home可调节筋膜枪档位, 长按Home可锁屏,

点按屏幕可暂停筋膜枪,或退 出按摩。

注:在该模式下,产品运行10分钟会自动自动停止。



 1、筋膜枪第一次开机会进入开机引导,引导设置完成后方 可进入主菜单。

2、筋膜枪恢复出厂设置后会重新进入开机引导。

\triangle	
注	
音	

初次使用时,请按最低档开始使用,待身体适应强度后,再提升按摩档位;头皮跟脸部按摩时仅可使用一档强度。
仅在软组织处使用,注意避开附近的骨头和关节,以免造成损伤。
由于高频冲击不可避免的损耗,产品运行音量稍微变大属于正常现

象, 若出现杂音、异响, 请联系客服处理。



运动模式 该模式为筋膜枪按摩教学指

导,引导用户在身体不同部位 使用不同按摩头按摩。


在该模式下

短按Home可调节筋膜枪档位, 长按Home可锁屏,

点按屏幕可暂停筋膜枪,或退 出按摩。





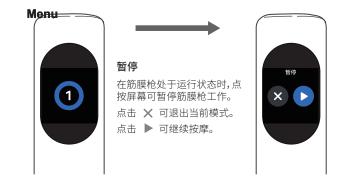

注:在该模式下,产品运行10分钟会自动自动停止。



设置 在设置模式下,可选择不同的 语言,开关提示声音,及恢复出 厂设置。 注:恢复出厂设置会重新进入 开机引导。





过载保护

在筋膜枪处于运行状态时,如 果遭遇过大阻力,筋膜枪会进 入过载保护并关机。短按Home 键可重新开机使用。





●产品参数

产品名称	Revive		
型号	OG 1104		
额定输入电压	5V 	额定输入功率	10W
额定输入电流	2A	电池容量	2200mAh
工作时间	10分钟(工作10分钟会自动关机或锁屏)		
产品净重	0.8kg(含全部按摩头及底座)		
充电时间	有线充电,充满约4H,无线充电约16H 可用约2H		

贮存与保养

●贮存

贮存期超过3个月时,应开箱检查,对产品重新充电再使用。 贮存时不能紧靠地面、墙壁和房顶。贮存室内应通风良好,避 免强烈日光照射和腐蚀气体侵蚀。

●运输

产品设有简易防振设施,适合航空、铁路、公路及轮船运输, 应避免雨、雪淋,倒置和碰撞。

●电源检查

检查供电电源,不得使用超过规定电压、电流的供电电源。经 常检查本产品,若发现破损、断裂现象应立即停止使用。送本 公司专业售后服务处。

●保养

采取防潮、防鼠、防污染措施。清洁本产品时应在关机的状态 下进行。使用后应将产品放置于安全的场所,切勿在产品上放 置重物。当出现故障时应请专业技术人员维修,不要随意拆装 产品。

产品弃置与回收

本产品不应随居家废弃物一起丢弃。当您决定弃置本产品时, 请遵照当地环境法律与指南丢弃。在废弃产品前,必须将电池 从产品中取出,并将电池妥善回收。

电池拆解及回收步骤:

- 1. 请找专业人员进行操作;
- 2. 切断外接电源, 拆解电池;
- 3. 废弃电池请放置到固定的回收点;
- 4. 请遵守当地环境保护法律与指南废弃,爱护环境。

故障检查与处理

机器出现故障时,请进行如下检查。 如仍无法解决,请立即停止使用,并与售后联系进行维 修,切勿私自拆解或修理本产品。

问题	可能原因	处理方法
产品无法	电池电量不足,无法开机	对产品进行充电
工作	产品电源开关键未开启	开启电源开关键
运行中突	电池电量不足,自动关机	对产品进行充电
然停止工作	单次按摩设定时间已到(10分钟)	再次开启电源开关
	负载过大,机器开启堵转保护功能	再次开启电源开关
产品过热	连续使用了多组按摩	停止工作进行冷却
按摩力度 弱	电池电量不足	对产品进行充电
	选择档位力度较弱	更换更强档位按摩

保修权限

- 1、本保修权限不可转让。
- 2、本保修服务仅对在 OGAWA 购买的产品有效。
- 3、当要求保修服务时,请出示购买证明(正本收据)。
- 4、所有保修项目,包括但不限于这些健身及适销性的保修 项目有效期限需视保修政策而定。
- 5、因错误使用、处理不当以及未经授权私自改装和维修产 品而导致的损坏,不属于保修范围。
- 6、此保修范围不包括不属于产品本身的附件。
- 7、此保修范围不适用于租凭、交易、商业、机构或其他非住 宅用户。
- 8、此保修范围内所涉及的维修服务需经过 OGAWA 授权, 且必须由授权的技术人员维修。
- 9、若需更换的维修附件缺货,OGAWA有权采用替代配件进行维修。



联络我们

马来西亚 Healthy World Lifestyle Sdn Bhd No.22 Jalan Anggerik Mokara 31/47 Kota Kemuning, 40460 Shah Alam Selangor Darul Ehsan, Malaysia Tei: +1800-88-4688 Fax:+603-5121 4386



香港 OGAWA Health Care International (HK) Ltd 31/F, YHC Tower, 1 Sheung Yuet Road,Kowloon Bay, KLN, Hong Kong S.A.R. Tel: +855 2248 8823 Fax: +85 22410 0119



新加坡 OGAWA Health-Care Pte Ltd 163, Kallang Way #07-11 SINGAPORE 349256 Tel:+065-6846 8588 Fax:+065-6846 7677

越南 OGAWA Vietnam 171, Nguyen Thi Thap Street Tan Phu Ward Dist 7 Ho Chi Minh City, Vietnam Tel : +84 8 3775 3093 / 3094 Fax : +84 8 3775 3095



非律宾 O-Healthcare Solution Phil. Inc. 2303, 4th Floor, G&A Building, Chino Roces Avenue Extension, Makati City, Philippines Tel: +632 889 0676/+632 844 6851 Fax:+632 812 0421